


Function Illustration

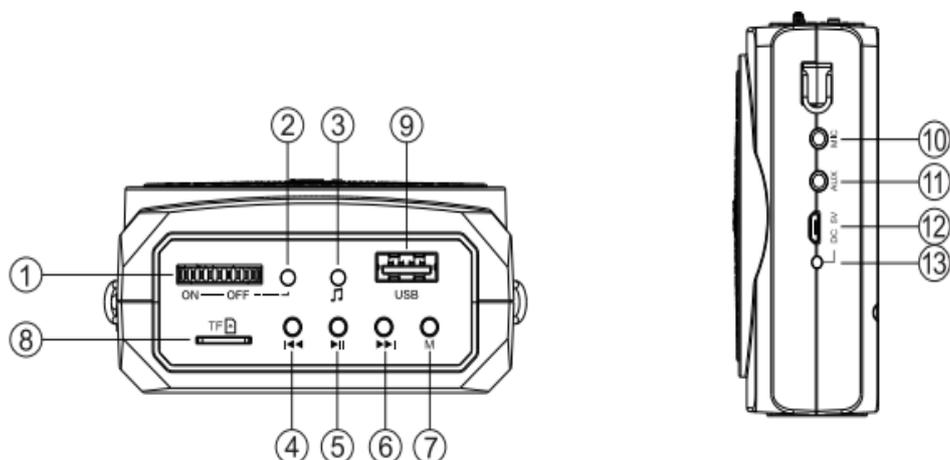

Main Function Description

1. Power Switch/ Volume Control

2. Power Indicator

3. MP3 mode indicator

When the indicator shows blue light, the mode is Bluetooth. When the indicator shows green light, the mode is TF card or USB driver.

4. Previous

Long press "⏮" for fast reverse, short press to go to previous music

5. Play/Pause

In playing music mode, short Press "⏸" to pause and press again to play

6. Next

Long press the "⏭" for fast forward, short press to go to next music.

7. Mode switch

After insert USB driver or TF card, short press "M" to switch the mode among USB driver/TF card mode. In playing music mode, long press "M" for 3 seconds to single song loop, and long press 'M' for 3 seconds again for all loop.

8. TF card slot

9. USB slot(reading data only)

10. MIC slot(support wired MIC)

11. AUX slot

12. DC 5V charging slot

13. Charging indicator

Operation Description

1. How to amplify your voice

Turn on speaker with power switch on the top of control panel, plug the headset microphone included into MIC slot, then your voice will be amplified;

2. How to play music via TF card/ USB driver

Insert TF card / USB driver into corresponding slot, speaker will play music automatically; Press "", " " to previous or next song or press number keys on the top of control panel to choose music;

Noted: TF card or USB driver is NOT included;

如 M700

3. How to play music via AUX input

Connect speaker to external audio device(with 3.55mm audio output like computer)via audio cable included;

How to connect with Bluetooth

1. Click "M" to switch to Bluetooth mode, the MP3 mode indicator shows blue light, and there will a voice prompts: Bluetooth is waiting for connection.
2. Turn on the Bluetooth device and search name "S619 " to pair.

How to charge speaker

Please turn the speaker off and charge it timely when it is in low battery with voice prompts "Low battery, please charge".

The red indicator light is always on when charging, and the red indicator light is off when fully charged.

Please note:

Please note:

1. Use the included DC 5V power adapter to charge the speaker internal rechargeable battery.
2. Plug adapter into 110~240 AC outlet. Connect the cable end into the DC 5V power input on speaker.
3. It will normally take 3–5 hours to fully charge the battery.
4. When charging is required, a voice prompt will indicate, " Low battery, please charge " , the battery indicator will blink while charging. It will stop blinking when battery is fully charged.
5. Recharge the battery within 48 hours of " low battery " voice prompt. In order to extend the life of the internal battery, please charge it regularly even if system is not being used.
6. It is suggested that you charge the internal battery an additional 1–2 hours after fully charged to extend its life.
7. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and could cause over heating.

Specifications

Output power	16W	Frequency response	80Hz-18000Hz
Speaker Impedance	4 Ω	Working temperature	-10°C-45°C
Charging Voltage	DC 5V 1A	Charging time	3H-5H
Music mode time	6H-8H(medium volume)	Amplify time	4H-6H(wired)

Package included:

- 1*speaker
- 1*headset microphone
- 1*waistband
- 1*charging cable
- 1*audio cable
- 1*user manual

How to wear voice amplifier unit



How to wear voice amplifier unit:



After-sale service

WinBridge provides one year warranty and lifetime technical support.

✉ info@winbridgepower.com

<http://www.winbridgepower.com>



Please be confident that seller support is just a mail away from you in case you find any difficulty. Kindly do not hesitate to write back to us if you need any clarification or any kind of support.