

What's in the package:

- 1* machine
- 2* microphones
- 1* Type C charging cable
- 1* DC 5V adapter
- 1* Aux cable
- 1* Manual



After-sale service

WinBridge provide one year warranty and lifetime technical support.

Toll Free Hotline: +1 (833)996-2881

info@wwinbridge.com

http:www.winbridgestore.com

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.



7

Cautionary Note

1. Please use the included adapter to charge the speaker and microphone's internal rechargeable battery.
2. Plug the adapter into an 110-240V AC outlet.
3. It takes approximately 3 hours to fully charge the machine.
4. The machine will emit a "DIDI" sound when the battery is low. Please charge it promptly.
5. In order to extend the battery life, it is recommended to charge the machine even when it is not in use.
6. It is suggested to charge the internal battery for an additional 1-2 hours to extend its lifespan.
7. Please do not overcharge the battery by leaving the system plugged in for an extended period of time. This may reduce the battery's life and cause overheating.

6

Music

How to Connect Bluetooth

Playing music from your device

This machine will be ready to connect via Bluetooth as soon as you turn it on. To use this feature, simply search for the machine name ("T7") under your playback device's Bluetooth connection settings and click to connect.

How to Use TF Mode

Playing music from an TF card

Plug your TF card into the designated slot on the back of the machine. Playback will begin immediately. Please make sure TF card has music file.

How to Connect to An External Media Source


To connect an external media source such as a MP3 player or phone, insert the AUX cable into the designated AUX input on the machine. Then, connect the other end of the cable to your external device.

5




WinBridge


Kid's Karaoke Machine

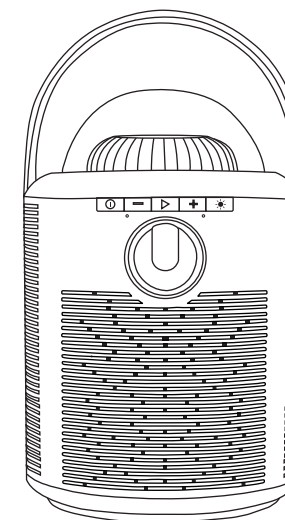

T7

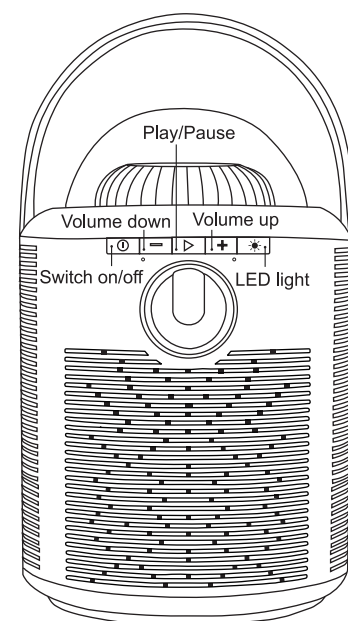 

1

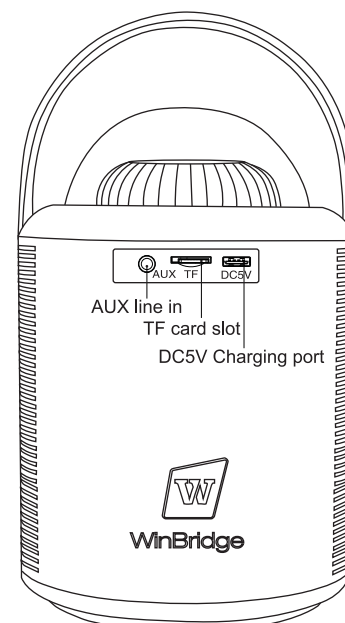 

2

Quick Start Guide

- #1 Charge the machine and microphones before each use;
- #2 Turn the machine and microphones on;
- #3 Choose your preferred playback setting;
- #4 Rock on;

Machine

How to Charge The Machine

Connect the USB adapter and a compatible Type-C cable to the machine and to a polarized outlet. Make sure to fully charge the device before each use. The red light will stay solid while charging, and will turn off when the battery is fully charged.

How to Turn The Machine On

Long press [Power] to turn the power switch on

How to Turn LED Light On/Off

Long press [LED] to turn the LED light on/off.

Short press [EFF] to adjust different LED effects.

How to Adjust The Machine Volume

To adjust the machine volume, press the + or - button briefly until it reaches your preferred volume.

3

Microphones

How to Connect Microphone to Machine

Turn microphones on using the power button on the handle, they will automatically connect to the machine.

How to Charge The Microphone

Connect the USB adapter and a compatible Type-C cable to the Microphone and to a polarized outlet. Make sure to fully charge the device before each use. The red light will stay solid while charging, and will turn off when the battery is fully charged.

How to Adjust The Microphone Volume

To change the volume of your singing in relation to the music, use the MIC +/- buttons to increase or decrease the volume to your preferred level.

How to Change The Sound Effect

Press the EFF button on the handle of the microphone briefly to change the sound effect. There are a total of 6 available sound effects to choose from: "reverb, monster sound, baby sound, male, female, and original voice."

4