

Package Includes:

- 1 * S100 Speaker
- 1 * Handheld Microphone
- 1 * AUX Cable
- 1 * Type-C Charging Cable
- 1 * Manual



After-sale service

WinBridge provide one year warranty and lifetime technical support.

- ☎ Toll Free Hotline: +1 (833) 996-2881
- ✉ info@winbridge.com
- http://www.winbridgestore.com

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.



Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Q: Why does the wireless microphone cut in and out during use, and how can this be resolved?

A: The cutting in and out is likely due to interference on the current frequency. To resolve this, briefly press the "Power Key" on the handheld microphone 3-4 times to switch to another frequency. This should help eliminate the interference and provide a more stable audio connection.

Feedback or howling:

- A. Be careful not to point the handheld microphone directly at the speaker to avoid feedback noise.
- B. In a smaller space, reduce the volume appropriately to avoid feedback or howling.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Frequently Asked Questions:

Q: The switch is on, but there is no sound.

A1: If the screen light is not on, it indicates that the power is low; charge the device to resolve the issue.

A2: If the volume is set to the minimum, adjust the volume to an appropriate level.

A3: Please check if the mute button has been accidentally pressed; if so, press the mute button again to restore the sound.

Q: The microphone is paired with the speaker, but why is there no sound output from the microphone?

A: Please ensure that the MIC.VOL on the speaker is turned on. If it is not, please turn it clockwise to increase the microphone volume.

Q: Why is the battery indicator still showing one bar after charging the speaker for several hours? Is the speaker's battery faulty?

A: Please use a charger with an output of 5V-3A for charging. Chargers with an output lower than 3A will charge the device very slowly. It is not an issue with the speaker's battery itself.

Q: What should I pay attention to when switching to the four sound effects?

A: Before using the Professional, Pop, and Hip-Hop sound effects, please turn on the echo knob on your speaker to enhance the effect significantly. Additionally, when you switch to the Acoustic mode, the echo will be automatically turned off.

TF Card Mode:

Insert a TF card to automatically play audio files. The display screen shows "TF"

Short press ⏮ for the previous track, long press ⏮ for fast rewind.

Short press ⏭ for the next track, long press ⏭ for fast forward.

USB Drive Mode:

Insert a USB drive to automatically play audio files. The display screen shows "USB"

Short press ⏮ for the previous track, long press ⏮ for fast rewind.

Short press ⏭ for the next track, long press ⏭ for fast forward.

Specifications:

| | | | |
|------------------|---------|-------------------------|------------|
| Output Power | 70W | Frequency Range | 60HZ-18KHZ |
| Battery Capacity | 4500mAh | Speaker Usage Time | 4-5 hours |
| Charging Voltage | 5V/3A | Handheld Mic Usage Time | 10+ hours |



WinBridge

 
Portable PA System





User Manual



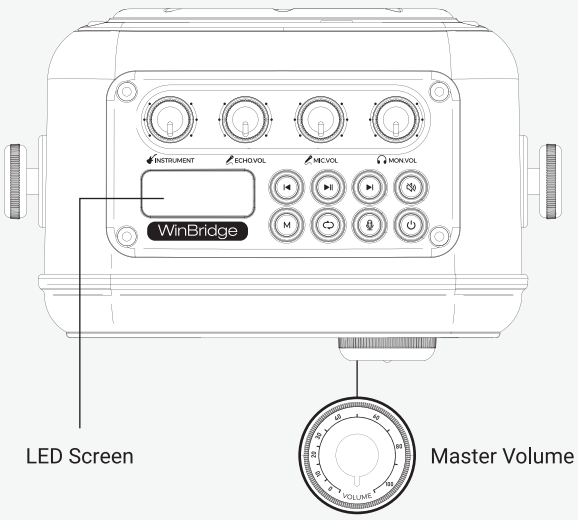







S100



 
 

 


S100 Function Illustration

 


-  Control the instrument volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume
-  Control the reverb volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.
The S100 offers four modes: Acoustic, Professional, Pop, and Hip-Hop. In Acoustic mode, Echo is turned off. To switch to another mode, press the Mic icon on the speaker or the handheld mic. Once switched, you can use the Echo button to adjust the reverb intensity.
-  Control the microphone volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume
-  Control the monitor volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume



 



-  Short press for previous track | Long press for fast rewind
-  Short press to pause/play
-  Short press for next track | Long press for fast forward
-  Short press to switch single loop or all loop
-  Short press to switch modes among Acoustic, Professional, Pop, and Hip-Hop.

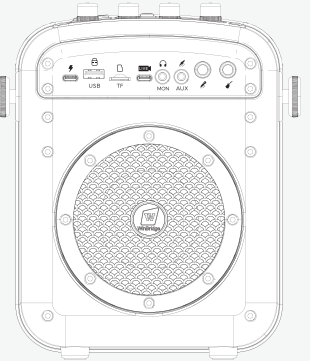 
-  **Switch Key:** Long press to turn on/off
-  Press the mute button to silence the audio. Press again to resume sound
-  Short press to switch modes

-  Type-C charging interface
-  Connect a USB flash drive to this port to play audio files stored on the drive
-  Insert a TF card into this slot to access and play audio files saved on the card
-  Connect your device to the live stream port using the appropriate cable for enhanced audio during broadcasts
Note: The cable is not included in the package
-  Plug in your headphones to monitor audio output in real-time
-  Plug in an AUX cable to this jack to connect external audio devices and amplify their sound
-  Connect 6.35mm wired microphone
-  Connect other Musical Instruments such as guitars, etc



Handheld Microphone:

-  Long press to turn on/off
-  **Charging Light:** The red light remains steady while charging, and it turns off when fully charged
-  **Volume Key:** Long press to increase volume
-  **Volume Key:** Long press to decrease volume
-  **Microphone Mode:** Short press to switch mode among Acoustic mode, Profession mode, Popular mode, Hip-hop mode
-  Type-C charging interface



Microphone and Speaker Auto Pairing:

By default, the microphone and the speaker will automatically pair when powered on.

Manually Pairing Handheld and Speaker:

1. Turn on the speaker, short press the M key to switch to UHF mode and simultaneously voice prompt "UHF Mode".
2. Long press the M key again for about 3 seconds until the "UHF" on the display screen starts flashing, while simultaneously voicing "UHF is waiting for pairing".
3. Turn on the handheld microphone, then simultaneously press the "+" and "-" buttons until the UHF on the speaker display stops flashing, and you hear the voice prompt "UHF paired".
4. Pairing is successful, and the microphone can output sound.

Speaker Charging Status:

It takes approximately 5 hours to fully charge with DC 5V/3A charger. The battery indicator lights flash while charging, and the indicator lights stop flashing when fully charged.

Handheld Microphone Charging Status:

 
It takes approximately 2 hours to fully charge with DC 5V/2A charger. The red light remains steady while charging, and it turns off when fully charged.

 
Bluetooth Pairing:

1. Short press the M key on the speaker to switch to Bluetooth mode, the display screen will flash "BLUE" and simultaneously voice prompt "Bluetooth Mode".
2. Open your Bluetooth device and search for "S100" in the list of available devices. Click to pair. When the pairing is successful, the "BLUE" stops flashing, and simultaneously voice prompt Bluetooth paired.

Note:

In Bluetooth mode, short pressing the speaker's M key will switch to other modes, and the Bluetooth connection will be disconnected. Therefore, to use the wireless handheld microphone while simultaneously playing music via Bluetooth, please first connect the wireless handheld microphone and then connect the Bluetooth device.

Short press  for previous track, long press does not support fast rewind.

Short press  for next track, long press does not support fast forward.