

### Package Includes:

- 1\* S200 Speaker
- 2\* Handheld Mics
- 1\* AUX Cable
- 1\* 1A Type-C Charging Cable
- 1\* 2.5A Type-C Charging Cable
- 1\* Strap
- 1\* Manual



### After-sale service

WinBridge provide one year warranty and lifetime technical support.

Toll Free Hotline: +1 (833) 996-2881  
info@winbridge.com  
http://www.winbridgestore.com

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.



11

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

10

### FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

9

### Frequently Asked Questions:

#### No sound while the device is powered on?

Please try the following solutions:

- A. If the screen remains off: The battery is likely low. Please recharge the device.
- B. If the microphone and master volume levels are set too low: Please turn the knob counterclockwise to increase the volume to a suitable level.
- C. In case of microphone frequency conflict: Please short-press the Volume key on the microphone to switch its frequency band.

#### Feedback or howling:

- A. Be careful not to point the handheld microphone directly at the speaker to avoid feedback noise.
- B. In a smaller space, reduce the volume appropriately to avoid feedback or howling.

#### Troubleshooting Intermittent Amplifier/ Microphone Connection:

If the amplifier and microphone exhibit intermittent operation, short-press the Volume key on the microphone to switch its frequency.

8

### TF Card Mode:

Insert a TF card to automatically play audio files. The display screen shows "TF MP3."

- Short press for the previous track, long press for fast forward.
- Short press for the next track, long press for fast forward.

### USB Drive Mode:

Insert a USB drive to automatically play audio files. The display screen shows "USB MP3."

- Short press for the previous track, long press for fast forward.
- Short press for the next track, long press for fast forward.

### Specifications:

 
Output Power	150W	Frequency Response	40HZ-20KHZ
Battery Capacity	14.8V/4500mAh	Signal-to-noise ratio	≥65dB
Charging Voltage	5V-3A	Bluetooth	≈10 meters
Charging Time	4-8 hours	Playing time	4-6 hours

7




WinBridge

## Multi-Functional Powerful Speaker System User Manual

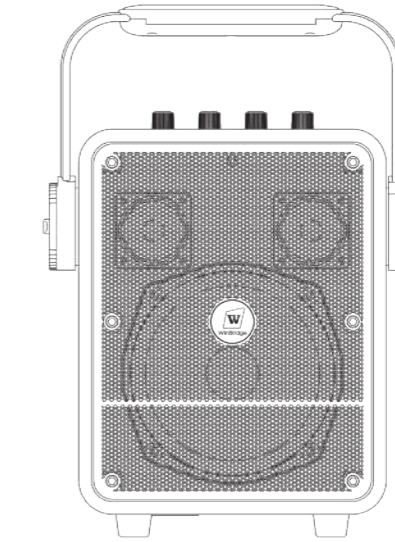

S200

### S200 Function Illustration:

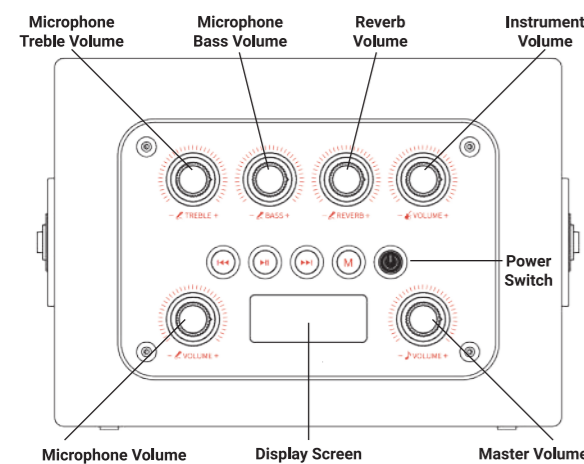 

### Knob Functions:

- **Microphone Treble Volume:** Turn clockwise to increase, counterclockwise to decrease.
- **Microphone Bass Volume:** Turn clockwise to increase, counterclockwise to decrease.
- **Reverb Volume:** Turn clockwise to increase, counterclockwise to decrease.
- **Instrument Volume:** Turn clockwise to increase, counterclockwise to decrease.

1

 
- **Microphone Volume:** Turn clockwise to increase, counterclockwise to decrease.
- **Master Volume:** Turn clockwise to increase, counterclockwise to decrease.

### Button Functions:

- Power Switch:** Press and hold for 3 seconds to turn on (screen will light up). Press and hold again for 3 seconds to turn off (screen will turn off).
- Previous track:** Short press to play the previous track.
- Next track:** Short press to play the next track.
- Short press to pause, press again to resume. In TF Card/USB mode: Long press first to enter single-track repeat mode, then long press again to switch to full-playlist repeat mode.
- Mode Switching:** Short Press: Cycles between available source modes (USB, TF Card, Bluetooth, UHF, AUX) when a corresponding device is connected. Long Press (in Bluetooth mode): Disconnects the current Bluetooth device.

2

### Inputs & Ports:

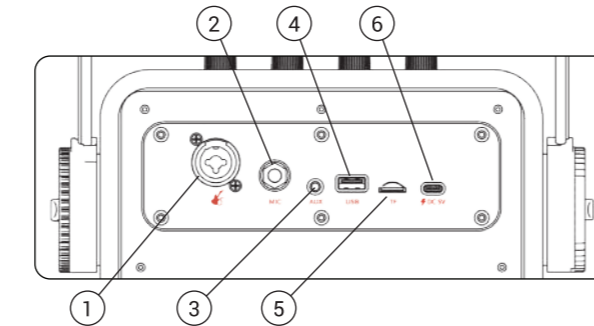


1. XLR Instrument Input: For instruments with an XLR connector.
2. Mic Input: For 6.35mm (1/4") wired microphone.
3. AUX Input: 3.5mm universal audio input for external audio sources.
4. USB Port: Play audio files directly from a USB drive.
5. MicroSD Card Slot: Play audio files directly from a MicroSD card.
6. TYPE-C Charging Port: To charge the device, connect a compatible charger to the unit's TYPE-C port, then plug the charger into a standard power outlet (100-240V). For faster charging, use a charger that supports PD+QC protocols.

3

### Notes:

 - a. When the unit indicates a low battery during use, please recharge it promptly. A full charge typically takes 4-8 hours.
- b. When using the device for the first time, the battery may have some charge. However, for optimal performance, it is recommended to fully charge it before first use.
- c. The unit is compatible with various smartphone chargers. Once charging is complete, you can disconnect the power by unplugging the charger from the outlet.



### Handheld Microphone:

- Switch Key:** Long press to power on and power off.
- Volume Key:** Long press to increase volume. Short press to switch frequency.
- Volume Key:** Long press to decrease volume. Short press to switch frequency.
- Type-C charging interface.**

(Please note: Do not set both microphones to the same frequency band, or there will be no sound. The selected band is shown on each microphone.)

4

### Microphone and Speaker Auto Pairing:

By default, the microphone and the speaker will automatically pair when powered on.

### Manually Pairing Handheld and Speaker:

1. Turn on the speaker, short press the M key to switch to UHF mode and simultaneously voice prompt "UHF Mode".
2. Long press the M key again for about 3 seconds until the "UHF" on the display screen starts flashing, while simultaneously voicing "UHF is waiting for pairing".
3. Turn on the handheld microphone, then simultaneously press the "+" and "-" buttons until the UHF on the speaker display stops flashing, and you hear the voice prompt "UHF paired".
4. Pairing is successful, and the microphone can output sound.
5. Please repeat steps 2 through 4 to pair the second microphone.

### Speaker Charging Status:

It takes approximately 5 hours to fully charge with DC 5V/3A charger. The battery indicator lights flash while charging, and the indicator lights stop flashing when fully charged.

5

### Handheld Microphone Charging Status:

It takes approximately 3 hours to fully charge with DC 5V/2A charger.

### Bluetooth Pairing:

1. Short press the M key on the speaker to switch to Bluetooth mode, the display screen will flash "BLUE." and simultaneously voice prompt "Bluetooth Mode".
2. Open your Bluetooth device and search for "S200" in the list of available devices. Click to pair. When the pairing is successful, the "BLUE" stops flashing, and simultaneously voice prompt "Bluetooth paired".

### Note:

1. In Bluetooth mode, a short press of the speaker's M key will switch to other modes, disconnecting the Bluetooth connection.
2. To use Bluetooth audio and UHF amplification simultaneously, first pair the UHF device, then switch to Bluetooth mode. (If the sequence is incorrect, Bluetooth audio and UHF amplification cannot be used simultaneously.)

Short press for previous track, long press does not support fast rewind.

Short press for next track, long press does not support fast forward.

6