



After-sale service

WinBridge provide one year warranty and lifetime technical support.

 
Toll Free Hotline: +1 (833) 996-2881
info@winbridge.com
http://www.winbridgestore.com

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.



11

S99 Function Illustration:

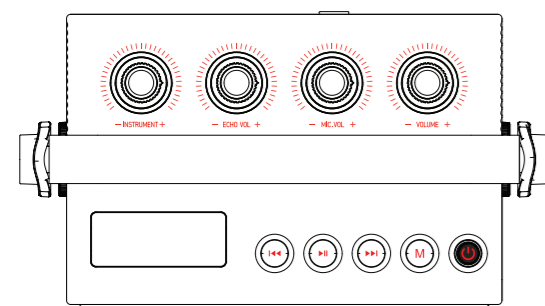


- Switch Key: Long press to power on and power off.
- Short press to switch modes.
- Short press for previous track/Long press for fast rewind.
- Short press for next track/Long press for fast forward.
- Short press to pause.

- Control the Music volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.
- Control the microphone volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.

1

 - Control the reverb volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.
- Control the instrument volume. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.

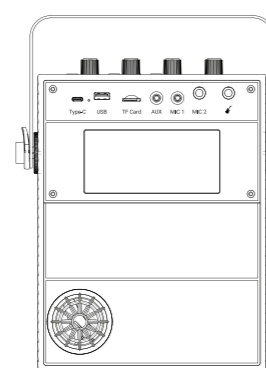

- Type-C charging interface.
- Charging indicator light.
- USB Slot.
- TF Card Slot.
- Aux Slot.

- Support 3.5mm wired microphone.
- Support 6.35mm wired microphone.
- Instrument Slot.

2

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

9

Handheld Microphone:

- Switch Key: Long press to power on and power off.
- Charging Light: The red light blinks while charging, and it turns off when fully charged.
- + Volume Key: Long press to increase volume.
- Volume Key: Long press to decrease volume.
- Microphone Mode: Short press to switch mode among Acoustic mode, Profession mode, Popular mode, Hip-hop mode.
- Type-C charging interface.



Microphone and Speaker Auto Pairing:

By default, the microphone and the speaker will automatically pair when powered on.

3

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

8

Manually Pairing Handheld and Speaker:

1. Turn on the speaker, short press the M key to switch to UHF mode and simultaneously voice prompt "UHF Mode".
2. Long press the M key again for about 3 seconds until the "UHF" on the display screen starts flashing, while simultaneously voicing "UHF is waiting for pairing".
3. Turn on the handheld microphone, then simultaneously press the "+" and "-" buttons until the UHF on the speaker display stops flashing, and you hear the voice prompt "UHF paired".
4. Pairing is successful, and the microphone can output sound.
5. Please pair the other microphone in the same way.

Speaker Charging Status:

It takes approximately 5 hours to fully charge with DC 5V/3A charger. The battery indicator lights flash while charging, and the indicator lights stop flashing when fully charged.

4

Package Includes:

- 1* S99 Speaker
- 2* Handheld Mics
- 1* AUX Cable
- 1* 1A Type-C Charging Cable
- 1* 2A Type-C Charging Cable
- 1* Strap
- 1* Manual

Frequently Asked Questions:

The switch is turned on, but there is no sound.

- A. If the screen is not lighting up, the power is low. Please charge it.
- B. If the volume is set to the minimum, please adjust the volume appropriately.

Feedback or howling:

 
- A. Be careful not to point the handheld microphone directly at the speaker to avoid feedback noise.
- B. In a smaller space, reduce the volume appropriately to avoid feedback or howling.

7



WinBridge

Portable PA System User Manual

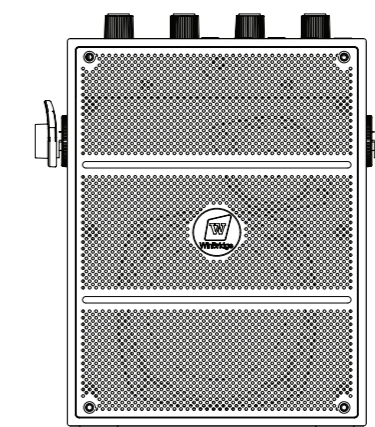

S99

TF Card Mode:

Insert a TF card to automatically play audio files. The display screen shows "TF MP3." Short press ○ for the previous track, long press ○ for fast rewind. Short press ○ for the next track, long press ○ for fast forward.

USB Drive Mode:

Insert a USB drive to automatically play audio files. The display screen shows "USB MP3." Short press ○ for the previous track, long press ○ for fast rewind. Short press ○ for the next track, long press ○ for fast forward.

Specifications:

Output Power:	100W	Frequency Range:	50HZ-20KHZ
Battery Capacity:	4000mAh	Speaker Usage Time:	4-6 hours
Charging Voltage:	5V/3A	Handheld Mic Usage Time:	10+ hours

6