




WinBridge

# User Manual



WB001

## Structure Instruction:

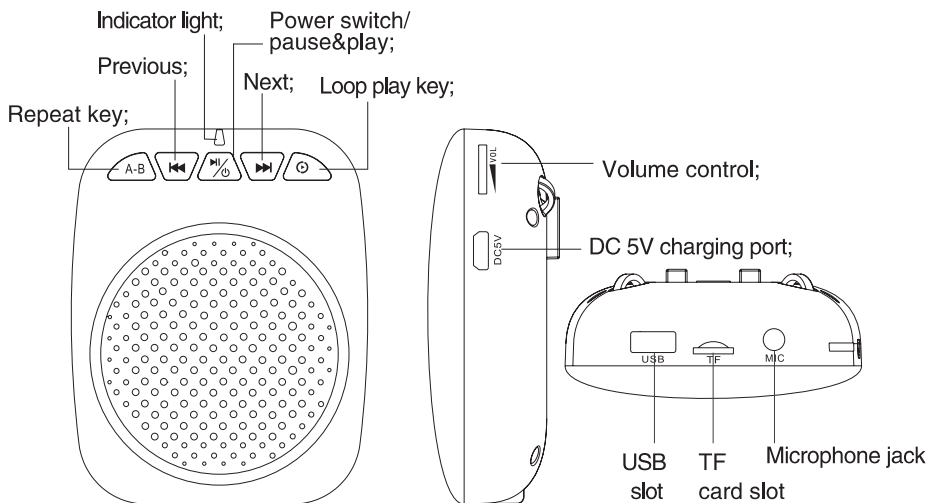




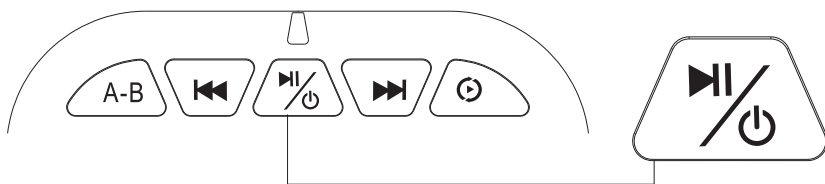
## Applications: .....





1. Take out the amplifier, fasten the waist belt to metal hooks on both sides; Then tie it on the waist or hung on your shoulder, the belt is adjustable. You can also use the back splint to cinch the speaker on the waistband or trousers.
2. Wear the headset microphone and adjust the position, stay 1 – 2cm away from the mouth. Insert the other end of the 3.5mm connector into the voice amplifier's MIC port.

## Note:


- ▶ This is a speaker with high power out, please firstly turn down the volume to the minimum when using in a small room;
- ▶ Be careful of getting the microphone too close to the speaker or it causes feedback;


Long press “  ” button to start-up or shutdown;  
Under TF card / USB driver playing mode, blue indicator flashes normally; Short press “  ” button to pause with the blue indicator become constantly light; Short press “  ” button again to back to normal.







Under TF card / USB driver playing mode, Short press “  ” or “  ” button to choose the Previous or Next song; Long press “  ” or “  ” button to Rewind or Fast forward.



Under TF card/USB driver playing mode, blue indicator flashes normally; **Short press** “  ” button to single cycle, blue indicator becomes **quickly flash**. **Short press** again to cancel single cycle, the speaker begin to all cycle, blue indicator back to flash normally.

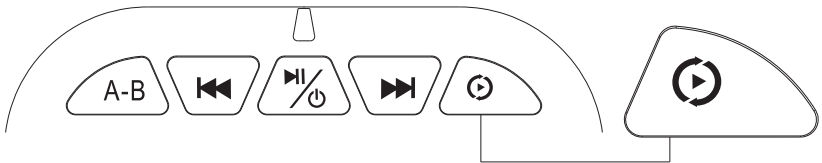

Under TF card/USB driver playing mode, blue indicator flashes normally; Short press “  ” button, the blue indicator become constantly light, Short press “  ” button again, the speaker start to repeat play with blue indicator flashing quickly. The play will back to normal if you short press “  ” button again.

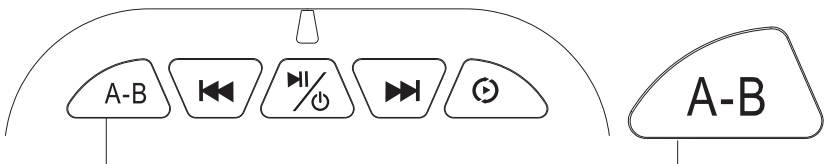


## How to charge speaker .....

Please plug the mic head of charging cable into speaker DC 5V jack and connect another USB head with any 5V charger, power bank or even your computer to charge speaker. Package does not come with charger but a charging cable. Most of chargers in our daily life are 5V.

**In charging:** red indicator flashes;

**Fully charged:** red indicator becomes constantly light;

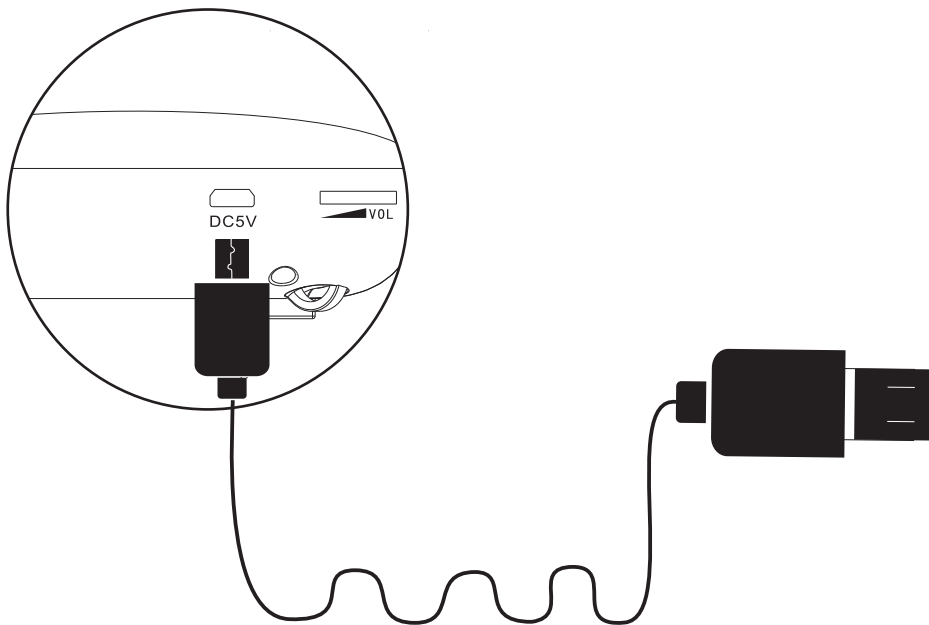

## **Trouble shooting:**

### **1. Turn on the power switch, but the amplifier has no sound.**

- A. The LCD is not light: It is slow battery and please charge the amplifier.
- B. The LCD is light: please check the wired microphone.

### **2. The voice amplifier has distinct howling.**

- A. Wear the microphone correctly: put the microphone in front of the mouth, the distance between microphone and amplifier should keep in 60–70CM;
- B. In a small room, please turn down the volume properly to avoid howling.
- C. Do not point the microphone toward the speaker.

### **3. Voice amplifier can not turn on while charging;**

- A: Unit itself can not turn on while charging, so please unplug then switch on again;

## **Caution:**

1. Aim at the headset MIC capsule when speaking and keep the distance between voice amplifier and MIC longer than 60cm avoid howling.
2. Do not insert or plug the connector frequently to avoid the looseness of socket or the bad connect.
3. Recharge timely when battery power is low.
4. The amplifier should be kept in dry and ventilated area, rain, water, thump should be avoided.

- 5.Original accessories are suggested if they need to be replaced.
- 6.Non–professional technician is not allowed to dismantle or repair the product; Please contact the local agent if there is any question or service requiremnt.

## Features:


- 1.WinBridge WB001 is lightweight, compact and portable;
- 2.Excellent for anyone in meetings or seminars, or guiding a tour.
- 3.It is a much better device – rounded edges, smoother design, charge at your computer, more features.
- 4.Operation is straight forward, even if you could without needing the manual. Just plug and play;
- 5.Could work well for elderly who cannot project their voice to keep them socially involved

## Technical Parameters:



Output power:	5W	Working time:	3-8hours (MIC mode)
Lithium battery:	800mAh	Charging time:	3~5 hours
Charging Voltage:	DC 5V,500mA	Product size:	110mm*88mm*46mm
Working time:	5-8hours (musical mode);	Unit weight:	138g

## Package includes:

- 1 \* main machine
- 1 \* waistband
- 1 \* wired microphone
- 1 \* USB cable
- 1 \* user manual

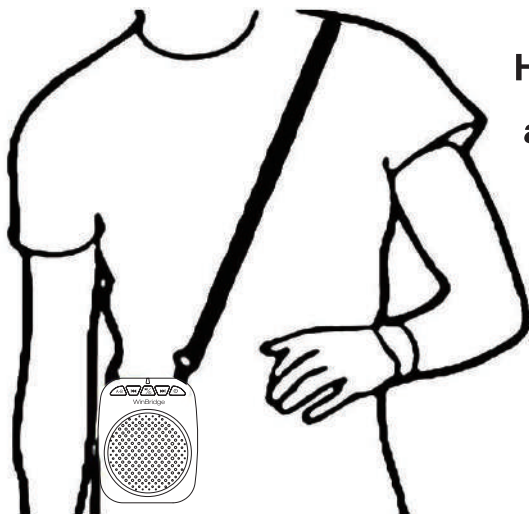

**How to wear voice amplifier unit:**

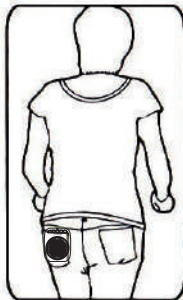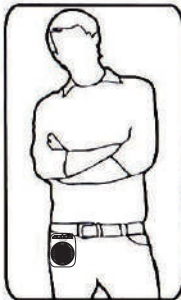

## **Safety Warning:**

1. Please do not put the product and accessories nearby the fire or other hot environment.
2. Please do not please put the product and accessories nearby the water or damp places. Do not use the products near the water. In addition, avoid putting it into any liquid for fear that the product and accessories will be damped.
3. Please do not optionally open or tear down the battery accessories. It may cause explosion danger if the battery replaced improperly. Avoid putting the battery into the water, fire or near to any hot environment.
4. This product needs to use the power adapter (DC5V ) to charge. After charged, you should remember to unplug the power cord or power sockt. We suggest stop other operations under the charging mode. If you need to use it, please cut off the power supply firstly;
5. Please turn off the product, if the wireless equipment is prohibited(it may lead to the disturbances of electronic equipment or hidden danger).
6. Please turn off the product in the flammable and combustibile areas, at the same time adhere to the instructions to avoid the explosion and fire hazard. The flammable and combustibile areas include: gas station, flammable or chemical products, transportation and storage facility, the areas with explosion dangerous sign etc.